


USER MANUAL

WS-858 Wireless Karaoke Microphone



1.PHOTOGRAPH

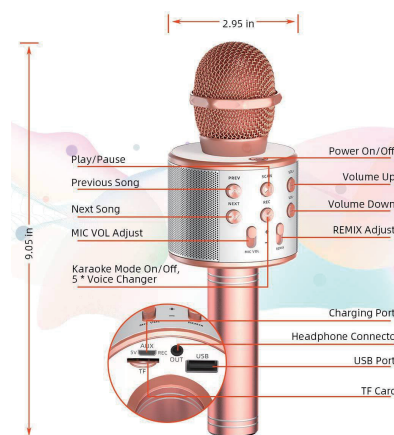

2.INSTRUCTIONS

HOW TO USE

1. Switch on/off: Press the power button, the blue light will be on/off

2. Bluetooth connection: Turn on bluetooth on your mobile phone, and search the bluetooth name 'WS-858', click and pair.
3. Playing music: Turn on mobile phone music app, download your favorite songs or accompaniment songs, volume could be adjusted by cellphone.
4. Adjusting sound: Adjust voice volume or echo in suitable place.
5. Start singing and have fun!

HOW TO RECORD

1. Connect the audio cable, plug the micro USB port into pocket and 3.5mm audio port into cellphone.
 2. Open recording app like Apple Music and follow the using process, Start recording.
- PS: Bluetooth will automatically disconnect when audio cable plug in.

3.HOWTOCHARGE

1. When the battery voltage is too low, the product will automatically turn off;
2. Using USB cable to connect with mobile phone standard jack, then the red light will be on;
3. Normal charging 4 hours, charging is completed, the red light is automatically extinguished
4. Normal conditions work 4 hours.

4.SPECIFICATIONS

Microphone: Capacitance
Output power: 5W (Speaker Output)
Frequency Range: 100Hz-10KHz
Maximum sound pressure level: >115dB 1KHz THD <1%
Reverb Mode: Echosound reverberation
Power Supply: Build-in Li-ion Battery
Battery Capacity: 1200mAh
Charging Voltage: DC 5V=1A

KARAOKE TREASURE INSTRUCTIONS

I. Buttons Operation

1. "⏮"

Hold: ON/OFF Press: Mode switching

2. "⏪"

Press: the previous song under

MP3 mode. Under selfie

mode, press it to enable

selfie function

(only for iOS system mobile phone)

3. "⏩"

Press: the previous song under MP3

mode. Under selfie mode, press


it to enable selfie function

(only for Android system mobile phone)

4. "⏸"

Press: Play/Pause. Under state, hold it for automatic search

5. "🔄" MIC/Replay

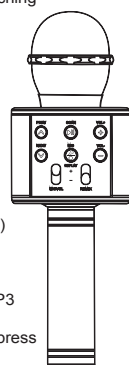

Press: Mike ON/OFF

Hold: Replay function under TF card play mode

6. "+" "Increase volume

7. "-" "Decrease volume

II. Wireless Karaoke

1. Supply power: Hold "⏮" button to start the product.
2. Wireless connection: enable the wireless of mobile phone, click to connect, successful connection if prompt tone is produced.
3. Adjust sound: adjust the sound volume of mike and the reverberation to suitable level.
4. Start Karaoke

III. Recording with mobile phone

1. Connect the recording wire: insert the MICRO plug of the recording wire into the MICRO interface of Karaoke Treasure, and the 3.5mm interface into the earphone jack of the mobile phone.

2. Open the Karaoke in the mobile phone such as : YouTube , you can use YouTube , The Voice, Star Maker, Red Karaoke, Yokee and many more.
3. Test and save the song: operate according to the instructions of Karaoke software.

IV. Selfie function

1. Press the "⏮" button to switch from wireless mode to selfie mode;
2. Enable wireless in the mobile phone, search "shutter", click connection;
3. Open the photograph interface of the mobile phone, press the "⏪" or "⏩" button to take photos. Note: 4.2.2 or higher version for Android system, 6.0 or higher version for iOS system, it doesn't support other versions temporarily. It doesn't support the mobile phone which has the independent and solid photograph button.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION: Risk of Fire and Burns , Follow Manufacturer's Instructions.